



MLPE: FIMER & Tigo solution

Compliance between FIMER solar inverters and Tigo TS4 MLPE

1. Scope and application

1.1 Overview

Combining FIMER's world-class inverters with Tigo's TS4 Platform offers a flexible and scalable solution to meet all the different needs of installers and end customers.

1.2 Application

This document is to provide valuable information when designing a residential solar system using FIMER's Module Level Panel Electronics (MLPE) solution. Additionally, it is to inform the certified contractor or electrician installing FIMER's MLPE solution of the necessary protocols to use during commissioning and servicing this system.

Please consult with the installation manual to address specific product installation processes.

This document does not serve as an installation manual. This document is to be used as a reference aid during design and implementation of these technologies.

Please adhere to all safety warnings and notes in the respective manufacturer manual.

This procedure relates to UNO-DM-TL-PLUS inverter family version and refer to all models listed in the table below:

Models UNO-DM-1.2/2.0/3.0/3.3/4.0/4.6/5.0/6.0-TL-PLUS-Q

in combination with Tigo Optimizer TS4 platform, with reference to all models listed in the table below:

Models TS4-F/O/S/M and TS4-A-F/2F/O/S/M

2. System integration

2.1 System overview

To effectively construct the FIMER MLPE Solution, select at least one of the FIMER UNO DM PLUS inverters from the list above, that fits the power requirements of your site. Multiple units can be connected for larger projects (see product data sheet for complete product details and specifications).

Select one of the compatible Tigo Energy Optimizers: The Tigo Energy TS4-A family is a retrofit solution, TS4-A-O for Optimization, TS4-A-S/F/2F for Safety (NEC 2017 690.12 rapid shutdown compliant), TS4-A-M for Monitoring. Once you have selected TS4-A units for the site, install them with Cloud Connect Advanced Universal Data Logger and Gateway module communication antenna (TAP - Tigo Access Point) also available from Tigo (TS4-A-F/2F doesn't need the CCA but the RSS transmitter). See product datasheets for complete product details and specifications on www.tigoenergy.com website. Both companies have conducted extensive tests, and have validated the effective performance of the systems together, as long as the following requirements and disclaimers will be observed:

- The system is within FIMER solar inverter's stated operating and installation conditions as specified in respective datasheets and manuals
- The operating limits (DC voltages, currents and power) of FIMER solar inverters are not exceeded at any time by the operation of the Tigo technology
- FIMER is not responsible for the compliance of the completesystem in terms of EMC regulation

- FIMER is not responsible for the total energy yield of the PV system because the MPP trackers of the inverters no longer control the operation of the PV modules
- Tigo Energy has approved the operation of its products with FIMER's UNO-DM-PLUS-Q inverters
- FIMER is not responsible for any malfunction in the Tigo Energy system configuration

By this precondition, FIMER's manufacturer warranty obligations for the UNO-DM-PLUS-Q inverters will remain when using the Tigo Energy TS4-A in combination with them.

2.2 Installation

After the power electronics devices are purchased, be sure to follow the installation guidelines from the respective manufacturer. Follow the instructions from the Tigo Energy installation manual making note of the following connection points:

- Using a smart phone or tablet, download the Tigo SMART App
- Using the Tigo SMART App, scan the Tigo TS4-A and Cloud Connect Advanced barcodes that can be found on the devices
- Proceed with the installation of the modules under the panel as explained in the Tigo Energy installation manual
- The Tigo TAP needs to be installed on the roof:
 33ft (10m) max between TAP and closest TS4 unit
 - 115ft (35m) max wireless range using mesh
 - No more than 10m between TS4 units on same TAP
- Connect the TAP to the Cloud Connect Advanced
- Complete the commissioning by following the prompts communicated on the Tigo SMART App
- On how to install the FIMER UNO-DM-PLUS-Q inverter please refert to inverter product manual

For illustration please refer to principle Single Line Diagram visible at the following page:

Single line Diagram of FIMER's MPLE solution using Tigo MLPE



Note

For technical service support when installing any of the optimizer solutions, please follow the Service and Technical Support protocols communicated by Tigo Energy. Please follow the respective manufacture installation and safety recommendations noted in the respective manual.



For more information please contact your local FIMER representative or visit: We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. FIMER does not accept any responsibility whatsoever for potential errors or possible lack of information in this document. We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of FIMER. Copyright© 2021 FIMER. All rights reserved.



