

ABB solar inverter

Quick Installation Guide

UNO-DM-1.2/2.0/3.0/3.3/4.0/4.6/5.0-TL-PLUS-Q

(from 1.2 to 5.0 kW)

EN



APPLY HERE THE WIRELESS IDENTIFICATION LABEL

In addition to the information given below, it is mandatory to read and observe the safety information and installation instructions shown in the installation manual. The technical documentation and the interface and management software for the product are available on the website. The equipment must be used in accordance to what is described in this Quick Installation Guide. Otherwise, the protections guaranteed by the inverter may be affected.



1. Labels and Symbols

The labels on the inverter show the markings, main technical data and the identification of the equipment and of the manufacturer

Regulatory Label

In case of a service password request, it is necessary to have the serial number available (SN: YYWWSSSSSS)

Wireless Identification Label

The label is divided in two separate parts by a dashed line; take the bottom part and apply it on the cover of this quick installation guide

The labels placed on the equipment absolutely **MUST NOT** be removed, damaged, dirtied, hidden, etc. In the manual, and/or in some cases on the equipment, the danger or attention zones are indicated by signs, labels, symbols or icons.


Obligation to consult the manual	General warning - Important safety information	Dangerous voltage	Hot parts
Degree of protection of the device	Temperature interval	Without isolating transformer	Direct and alternating current respectively
Positive and negative pole of the input voltage (DC)	Obligation to use protective clothing and/or personal protective equipment	Point of connection of the protective ground	Discharge time of the stored energy

2. Models and Inverter Components

The inverter models referred to in this installation guide are available in six power capacity systems: 1.2kW, 2.0kW, 3.0kW, 3.3 kW, 4.0 kW, 4.6 kW and 5.0 kW. For each model, the following variants are available (suffix could be combined):

- **Standard models** (e.g. UNO-DM-3.3-TL-PLUS-B-Q). Models equipped with Wireless communication (-B suffix).
- **Models with "S" suffix** (e.g. UNO-DM-3.3-TL-PLUS-SB-Q). Models equipped with DC disconnecting switch.
- **Models with "X" suffix** (e.g. UNO-DM-3.3-TL-PLUS-SB-X-Q). Models equipped with UNO-DM-COM KIT.
- **Models with "U" suffix** UNO-DM-5.0-TL-PLUS-SB-U. Unbalanced input channels (UNO-DM-5.0-TL-PLUS model only).

Main components	
01	Bracket
03	Heatsink
04	Anti-condensation valve
05	Front Cover
06	LED panel
09	DC Input Connectors
10	AC Output Connector
11	Wireless antenna connector
12	DC Input terminal block
13	Locking Screw
16	DC disconnect switch (only -S models) UNO-DM-COM KIT or UNO-DM-PLUS Ethernet COM kit board (optional)
19	External ground connection
20	Service cable gland

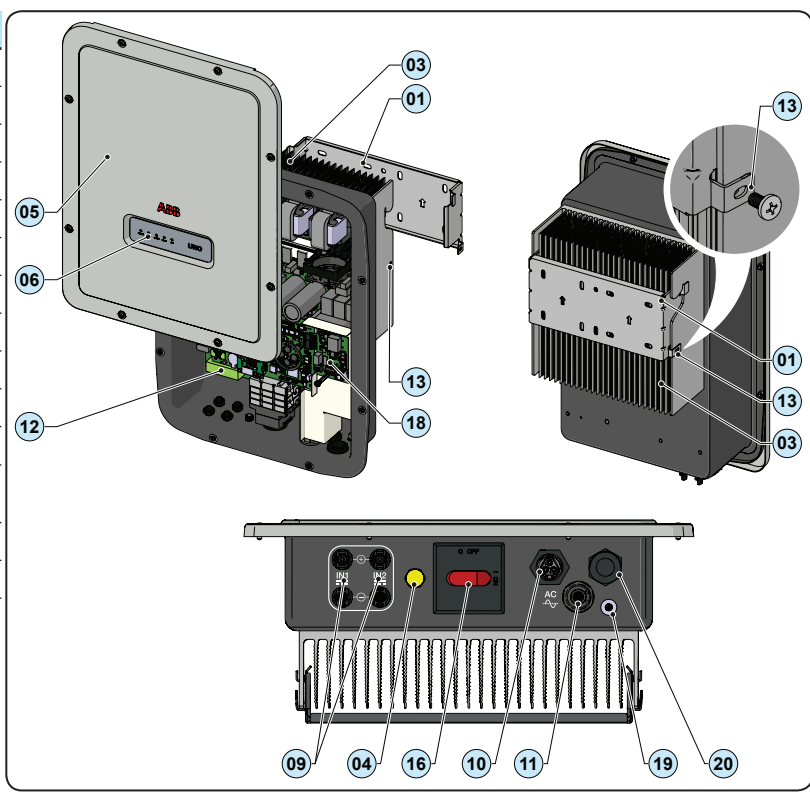


3. Lifting and transportation

Transportation and relocation
The transportation of the device, in particular via land transportation, must be made with adequate means and ways to protect the parts from violent impacts, humidity, vibrations, etc.

Lifting
The means used for lifting must be suitable to bear the weight of the equipment. Weight of the equipment components

Model	Weight
All models	15 kg


Unpacking and inspection
The packaging components must be removed and disposed of according to the applicable regulations of the country where the device is installed. Upon opening the packaging, check the integrity of the equipment and verify that all the components are present. If you notice defects or deterioration, stop the operations and call the carrier, as well as inform ABB Service immediately. Please keep the packaging in the event it has to be returned; the use of inadequate packaging will void the warranty. Always store the Quick Installation Guide, all the supplied accessories and the AC connector cover in a safe place.

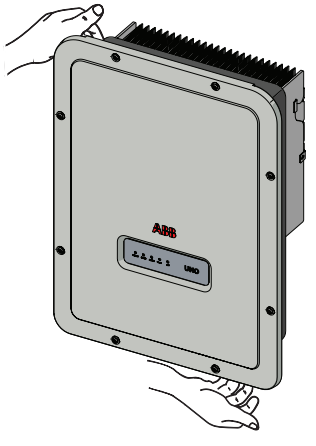

4. Choice of the place of installation

Place and position of installation

- Refer to the technical data for the verification of the environmental conditions to be met.
- Do not install the inverter where it is exposed to direct sunlight. If necessary, use protection that minimizes the exposure, especially for ambient temperatures above 40°C/104°F.
- Do not install in small unventilated spaces where the air cannot circulate freely.
- Always ensure that the airflow around the inverter is not blocked to prevent overheating.
- Do not install near flammable substances (minimum distance 3 m/10 ft).
- Do not install on wooden walls or other flammable substances.
- Do not install inside residential premises or where a prolonged presence of people or animals is planned, due to the acoustic noise that the inverter produces during operation. The noise emission value is strongly influenced by the installation location (e.g. type of surfaces around the inverter, general properties of the room, etc.) and the quality of electricity supply.
- Install on a solid wall or structure that is suitable to support the weight of the equipment.
- Install in an upright position with a maximum inclination as shown in the figure.
- Respect the minimum distances indicated. Choose a location that allows enough space around the unit to allow easy installation and removal of the equipment from the mounting surface.
- Where possible, install at eye level for easy viewing of the LEDs.
- Install at a height that takes into account the weight of the equipment.
- When installing multiple inverters, position the inverters side by side while maintaining the minimum distances (measured from the outer edge of the inverter); if the space available does not allow this provision, position the inverters in a staggered layout, as indicated in the figure, in order to make sure that the heat dissipation is not affected by the other inverters.
- All installations at altitudes above 2,000 m/6,500' must be assessed on a case by case basis with ABB Service to determine the proper derating of the input parameters.

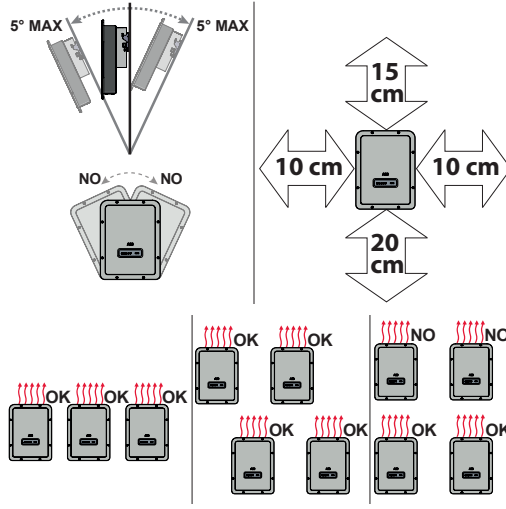

The final installation of the inverter must not compromise the access to any disconnection devices located outside. Refer to the warranty conditions to evaluate the possible exclusions related to an improper installation.


5. Supplied component list

Components supplied with the inverter	Quantity	Components supplied with the inverter	Quantity
Bracket for wall fixing	1	(Spare part) T20 screw for front cover	1
Waterproof connector for the AC cable connection	1	M5x10 screw for the external ground connection	1
Wireless antenna	1	M5 contact washers for the external ground connection	2
Cable with faston isolated for the configuration of the input channels in parallel	1 + 1	T20 Wall bracket locking screws (to be used when lock springs 02 on the bracket are missing)	2
		Technical documentation	1

6. Assembly instructions

Do not open the inverter in case of rain, snow or high humidity (>95%). During the installation, do not place the inverter with the front cover facing the ground. Install the inverter by following this procedure:


- Place the bracket (01) level on the wall and use it as a drilling template.
- The selection of the appropriate number and distribution of the anchors is the responsibility of the installer. The choice must be made according to the type of wall, frame or other type of support, and should be sized considering a total load of more than 4 times the weight of the inverter (total 4x15=60 kg total). Depending on the type of anchor chosen, drill the holes required for the fixing of the bracket (Figure A).
- Fix the bracket to the wall or structure.
- Carefully lift the inverter and hook it onto the bracket by inserting the two supports in the slots on the inverter (Figure B).
- Proceed to anchor the inverter to the bracket by installing the two (one each side) locking screws (Figure B1).
- Install wireless antenna by screwing it into the dedicated connector located on the bottom part of inverter (Figure C).

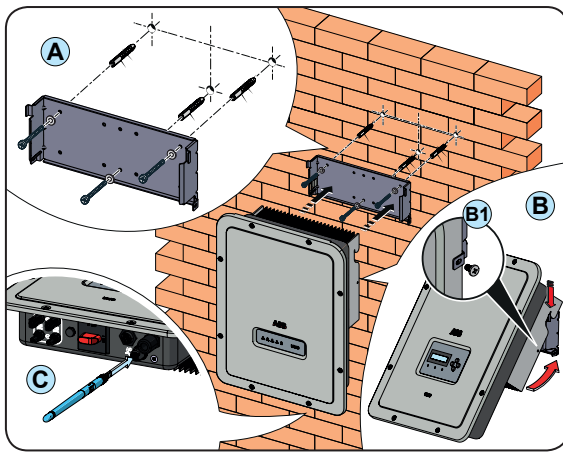

7. Opening the cover

WARNING! ELECTRIC SHOCK HAZARD! Hazardous voltages may be present inside the inverter. The access to the internal zones of the inverter must be carried out after a minimum waiting time of 5 minutes since the inverter was disconnected from the grid and from the photovoltaic generator.

- The main connections are made on the lower part (outside) of the inverter. To install the accessories and make the necessary connections, unscrew the 8 screws using a TORX T20 key and open the front cover (05); while removing the screws, pay special attention since additional screws are not supplied.
- After making the connections, close the cover by tightening the 8 screws on the front, while respecting the sequence and tightening torque (2.5 Nm).

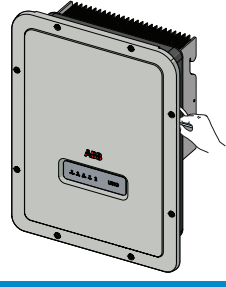


8. Input connection (DC) and input configurations

Check the correct polarity of the input strings and the absence of earth leakages of the PV generator. When the PV panels are exposed to sunlight, they provide a continuous voltage (DC) to the inverter. Access to the internal inverter zones must be carried out with the equipment disconnected from the grid and from the PV generator.

Caution! The inverters referred to in this document are **WITHOUT AN ISOLATION TRANSFORMER** (transformer-less). This type involves the use of PV panels of an isolated type (IEC61730 Class A Rating) and the need to maintain the PV generator floating with respect to earth; no generator pole must be connected to the ground.

If multiple strings are connected to the same input, they must have the same type and number of panels in series. ABB also recommends they have the same orientation and inclination. Only for the 5kW model. If the input strings are connected in channels with independent mode, keep in mind that channel 1 (IN1) supports 19A while channel 2 (IN2) supports 11.5A.


- Observe the maximum input current with respect to quick-coupling connectors. Refer to "String inverters - Product manual appendix" document available on the site www.abb.com/solarinverters, to find out the make and model of the quick-coupling connector used on the inverter. Depending on the model of the connectors installed on your inverter, it will be necessary to use the same model for the corresponding counterparts (by checking the manufacturer's website or via ABB for the compliant counterpart).
- The use of non-compliant counterparts with respect to the quick-coupling connectors models present on the inverter, may cause serious damage to the unit and result in the immediate loss of warranty

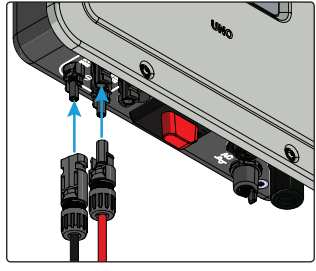

- Connect the DC input, always checking the tightness of the connectors.
- Versions of the inverter which are equipped with two independent input channels (i.e. dual maximum power point tracker, MPPT), can be configured as parallel (i.e. single MPPT).

Configuring Input Mode to Independent (default configuration)
This configuration is set at the factory and involves the use of the two input channels (MPPT) in an independent mode. This means that the jumpers (supplied) between the positive and negative poles of the two DC input channels (12) **must not be installed**, and that the independent channel mode should be set during the commissioning phase, in the dedicated section of the internal webserver "SETTINGS > SETUP DC SIDE > INPUT MODE".

Configuring Input Mode to Parallel
This configuration involves the use of the two input channels (MPPT) connected in parallel. This means that the jumpers (supplied) between the positive and negative poles of the two DC input channels (12) **must be installed**, and that the parallel channel mode should be set during the commissioning phase, in the dedicated section of the internal webserver "SETTINGS > SETUP DC SIDE > INPUT MODE".

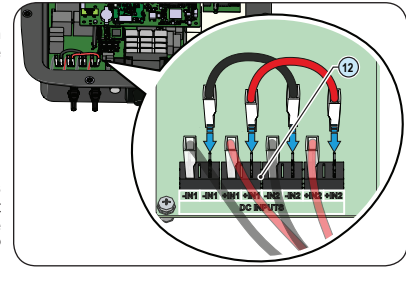


Protection switch under load (AC switch) and sizing of the line cable
To protect the AC connection line of the inverter, we recommend the installation of a protection device against overcurrent and earth leakages with the following features:

Table with columns: Type, Nominal voltage, Nominal current, Magnetic protection feature, Number of poles, Type of differential protection, Differential sensitivity. Rows: UNO-DM-1.2, UNO-DM-2.0, UNO-DM-3.0, UNO-DM-3.3, UNO-DM-4.0, UNO-DM-4.6, UNO-DM-5.0.

ABB declares that the ABB high frequency inverter without a transformer are not manufactured to inject continuous currents of ground fault, and therefore, the differential installed downstream of the inverter, type B according to IEC 60755/A 2, is not required.

Characteristics and sizing of the line cable
The cable should be three-pole. The section of the AC line conductor must be sized in order to avoid unwanted disconnections of the inverter from the distribution network due to high impedances of the line that connects the inverter to the point of supply of electricity.

Table: Line conductor cross-section vs. Maximum length of the line conductor (m). Columns: UNO-DM-1.2, UNO-DM-2.0, UNO-DM-3.0, UNO-DM-3.3, UNO-DM-4.0, UNO-DM-4.6, UNO-DM-5.0.

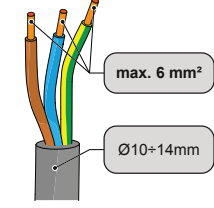

The values are calculated in nominal power condition considering: 1. a power loss along the line of not more than 1%. 2. copper cable used, with HEPR rubber insulation and placed in open air

Caution! Before performing the operations described below, make sure that you have properly disconnected the AC line downstream of the inverter

For the grid connection of the inverter, 3 connections are needed: ground, neutral and phase. The ground connection of the inverter is mandatory. The connection of the network cable to the inverter is performed by means of the dedicated AC output connector (10), by doing the following:

Installation steps 1-6: 1. Remove connector head... 2. Insert cable... 3. Prepare cable... 4. Install individual wires... 5. Close connector... 6. Remove protective cap.

To maintain the IP protection rating of the inverter, it is mandatory to install the counterpart with the AC cable connected or the protective cap, on the AC output connector. In addition, the connector must not be subjected to tensile forces (examples: do not connect weights to the AC cable, do not leave excess wire hanging, etc.).

Click on "Next" button to proceed to the next stage of the configuration wizard. The IP address assigned may vary for reasons connected to the wireless home router setup (for example, a very brief DHCP lease time). If verification of the address is required, it is usually possible to obtain the client list (and the corresponding IP addresses) from the wireless router administration panel.

The most common causes of losing connectivity might be: different wireless network password, faulty or unreachable router, replacement of router (different SSID) without the necessary setting updates.

STEP 3 - Date, Time and Time zone. Set the Date, Time and Time zone (The inverter will propose these fields when available). When it's not possible for the inverter to detect the time protocol, these fields have to be manually entered.

STEP 4 - Inverter country standard, Input mode, Meter and Energy policy.

Table with columns: Country standard, Input mode, Meter, Energy Policy. Rows: Set the grid standard of the country in which the inverter is installed, Independent/Parallel, None/REACT-MTR-1PH/ABB 3PH/ABB 1PH, Zero injection/Self consumption/Custom.

Confirm the settings by clicking "DONE"; the inverter will reboot at the finish of the meter test phase (if installed). After the wizard is completed, the system will power-on. The inverter checks the grid voltage, measures the insulation resistance of the photovoltaic field with respect to ground and performs other auto-diagnostic checks.

To address any problems that may occur during the initial stages of operation of the system and to ensure the inverter remains fully functional, you are advised to check for any firmware updates in the download area of the website www.abb.com/solarinverters or at https://registration.abb.com/solarinverters.com

Large technical data table with columns: UNO-DM-1.2, UNO-DM-2.0, UNO-DM-3.0, UNO-DM-3.3, UNO-DM-4.0, UNO-DM-4.6, UNO-DM-5.0. Rows: Output, AC connection type, Nominal output AC power, Maximum output AC power, Maximum apparent power, Nominal output AC voltage, Output AC voltage range, Maximum AC output current, Maximum fault current, Short circuit current contribution, Inrush current, Nominal output frequency, Output frequency range, Nominal power factor, Total harmonic current distortion, AC connections type, Output Protection, Anti-islanding protection, Maximum external AC overcurrent protection, Output overvoltage protection, Operational Performance, Maximum efficiency, Weighted efficiency, Power threshold of the power, Nighttime consumption, Communication, Embedded Communication Interface, Embedded Communication Protocol, Commissioning tool, Firmware Update Capabilities, Monitoring, Optional board UNO-DM-COM kit, Optional Communication Interface, Optional Communication protocol, Optional board UNO-DM-PLUS Ethernet COM kit, Optional Communication Interface, Optional Communication protocol, Environmental, Ambient temperature range, Ambient temperature derating, Relative humidity, Typical noise emission pressure, Maximum operating altitude without derating, Classification of environmental pollution degree for the external environment, Environmental category, Physical, Environmental protection degree, Cooling system, Dimensions (H x W x D), Weight, Mounting system, Overvoltage category in conformity with IEC 62109-1, Safety, Isolation level, Certifications, Safety class, Safety and EMC standard, Grid standard.

LEDs (06) table: POWER (Green), COMM (Green), ALARM (Yellow), WLAN (Multicolor), GFI (Red). Includes diagram of LED indicators on the UNO inverter.

Before proceeding with commissioning, make sure you have carried out all the following checks: - Check the correct connection and polarity of the DC inputs, and the correct connection of the AC output and ground cables. - Check the sealing barrier of the cable ducts and installed quick-fit connectors to prevent accidental disconnections and/or avoid compromising the IP65 environmental protection rating.

Commissioning is carried out via Wi-Fi connection to the inverter web user interface. Initial setup must therefore be carried out via a tablet, notebook or smartphone with a Wi-Fi connection. To establish the connection and operate with the inverter, it is necessary to connect its input to the DC voltage of the photovoltaic panels.

Make sure that the irradiation is stable and adequate for the inverter commissioning procedure to be completed.

Pre-commissioning phase 1 - Connection to the local Wi-Fi network. DEVICE USED TABLET/SMARTPHONE. Once powered, launch a QR reader for mobile and SCAN the QR code marked with 1 on the label on the right side of the inverter and connect to inverter network (tap connect).

QR code and label information for Wi-Fi connection: SN WLAN: SSSSSSSSSS, PN WLAN: PPP.PPPPP.PP, MAC: XX:XX:XX:XX:XX:XX.

Pre-commissioning phase 2 - Internal web UI access. DEVICE USED LAPTOP. Enable the wireless on the device you are using for the commissioning and search for the network named ABB-XX-XX-XX-XX-XX-XX, where "X" is an hexadecimal number of the MAC Address (the MAC Address is indicated on the "wireless identification label" on the side of the inverter).



Recommended browsers: Chrome from v.55, Firefox from v.50, Safari from V.10.2.1

STEP BY STEP COMMISSIONING WIZARD: STEP 1 - Administrator/User login credentials. Set the Administrator account user and password (minimum 8 character for password). Administrator account can open and view the contents of photovoltaic site.

STEP 2 (Optional) - Residential wireless network connection. The parameters relating to the home wireless network (set on the router) that must be known and set during this step are: IP Settings: DHCP or Static.

STEP 3 - Date, Time and Time zone. Set the Date, Time and Time zone (The inverter will propose these fields when available). When it's not possible for the inverter to detect the time protocol, these fields have to be manually entered.

STEP 4 - Inverter country standard, Input mode, Meter and Energy policy.

Table with columns: UNO-DM-1.2, UNO-DM-2.0, UNO-DM-3.0, UNO-DM-3.3, UNO-DM-4.0, UNO-DM-4.6, UNO-DM-5.0. Rows: Output, AC connection type, Nominal output AC power, Maximum output AC power, Maximum apparent power, Nominal output AC voltage, Output AC voltage range, Maximum AC output current, Maximum fault current, Short circuit current contribution, Inrush current, Nominal output frequency, Output frequency range, Nominal power factor, Total harmonic current distortion, AC connections type, Output Protection, Anti-islanding protection, Maximum external AC overcurrent protection, Output overvoltage protection, Operational Performance, Maximum efficiency, Weighted efficiency, Power threshold of the power, Nighttime consumption, Communication, Embedded Communication Interface, Embedded Communication Protocol, Commissioning tool, Firmware Update Capabilities, Monitoring, Optional board UNO-DM-COM kit, Optional Communication Interface, Optional Communication protocol, Optional board UNO-DM-PLUS Ethernet COM kit, Optional Communication Interface, Optional Communication protocol, Environmental, Ambient temperature range, Ambient temperature derating, Relative humidity, Typical noise emission pressure, Maximum operating altitude without derating, Classification of environmental pollution degree for the external environment, Environmental category, Physical, Environmental protection degree, Cooling system, Dimensions (H x W x D), Weight, Mounting system, Overvoltage category in conformity with IEC 62109-1, Safety, Isolation level, Certifications, Safety class, Safety and EMC standard, Grid standard.

1. Refer to the document "String inverter - Product Manual appendix" available at www.abb.com/solarinverters to know the brand and the model of the quick fit connector. 2. For UK G83/2 grid standard, maximum output current limited to 16A up to a maximum output power of 3600W and maximum apparent power of 3600 VA.

Contact us UNO-DM-1.2_2.0_3.0_3.3_4.0_4.6_5.0-TL-PLUS-Q-Quick Installation Guide EN-RevA EFFECTIVE 16-11-2018

